
PREMIUM SLIM LINE REMOTES

LIMIT SETTINGS QUICK GUIDE

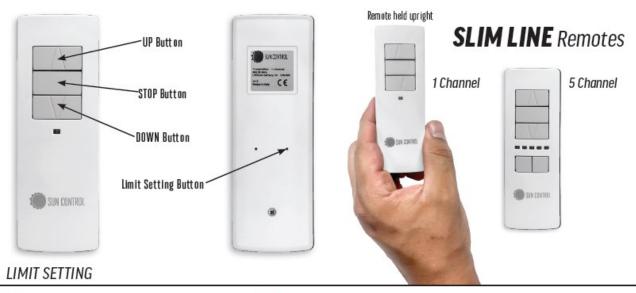

(1) ALWAYS SET THE TOP LIMIT FIRST

Ensure the remote is held upright before entering limit programming mode.

Using a paper clip, push the LIMIT SETTING button until the motor makes a brief movement (jogs) in both directions to enter limit programming mode.

Red light will briefly flash



Set bottom limit: Press and hold the DOWN button and run the motor to desired bottom position.

O Shade will only move when button is pushed.



When shade is in the desired position, press and hold the STOP button to set the bottom limit position. The motor will motor make a brief movement (logs) in both directions

Red light will briefly flash when UP button is first pushed.

BOTTOM LIMIT IS NOW SET.

Set top limit: Press and hold the UP button and run the motor to desired top position.

① Shade will only move when button is pushed.

Red light will briefly flash when UP button is first pushed.



When shade is in the desired position, press and hold the STOP button to set the top limit position. The motor will motor make a brief movement (jogs) in both directions

Red light will briefly flash when UP button is first pushed.

TOP LIMIT IS NOW SET.

• Remote is no longer in LIMIT PROGRAMMING MODE

Limits are now set. When the **UP** bottom is pushed, shade will raise to the set upper limit and when the **DOWN** button is pushed, the shade will lower to the bottom set limit. Press **STOP** button at any time to stop the shade from moving in either direction.

Limit setting instructions are for 1 channel premium remotes. To set limit settings for 5 channel remotes, first ensure you are on the correct channel then follow the instructions to set limit settings.